


5. To tighten the harmonic balancer bolt, position the breaker bar across the "OFF" position and arrange the breaker bars as seen below.



Caution: Do not arrange the breaker bars as seen below to tighten the balancer bolt as the HBK-10A balancer lock will dislodge and may result in injury or damage to the vehicle.



6. When tightening the balancer, be sure to torque the bolt using a torque wrench as seen below to the factory recommended specifications.

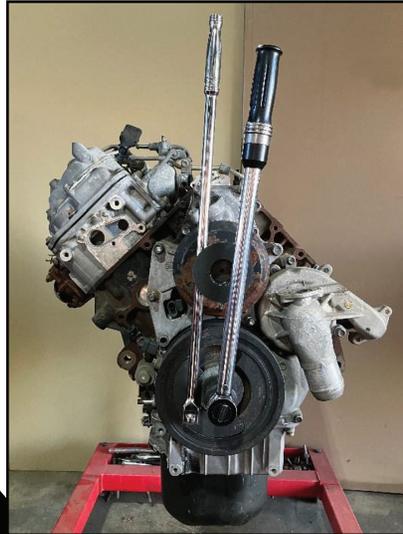

Warning: Remove the HBK-10A balancer lock from harmonic balancer. Failure to do so may result in severe injury or damage to the vehicle.

LIFETIME
EXCHANGE
WARRANTY



559-625-1818
917 North Plaza Dr.
Visalia, CA 93291
www.invincibletools.com



INVINCIBLE
TOOLS

HBK-10
Instructions






1. Remove the fan shroud, the fan and fan clutch, the serpentine belt, and the lower radiator hose to drain the coolant system.
2. Screw on the HBK-10B tool rest onto the fan clutch shaft completely. (Below image is only partial threaded on for clarity.)



3. The HBK-10A balancer lock has two positions, "ON" for reinstalling the balancer and "OFF" for removing the balancer. Position the wrench as seen below for the required operation.



4. To loosen the harmonic balancer bolt, position the breaker bar across the "ON" position and arrange the breaker bars as seen below.

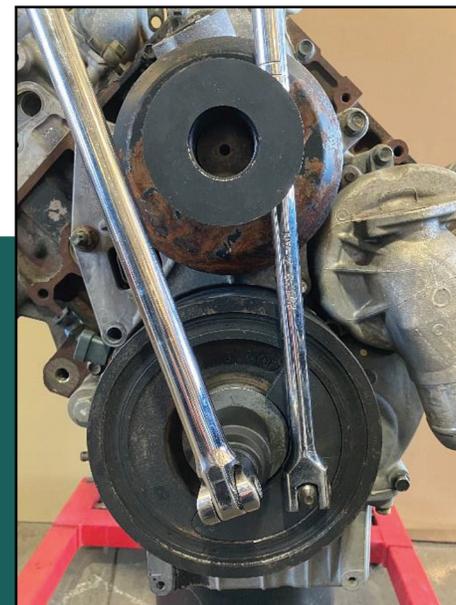

Caution: Do not arrange the breaker bars as seen below to loosen the balancer bolt as the HBK-10A balancer lock will dislodge and may result in injury or damage to the vehicle.

